


IMMEDIATE LOAD - denture conversion technique



Place abutments



Reline impression over low-profile copings

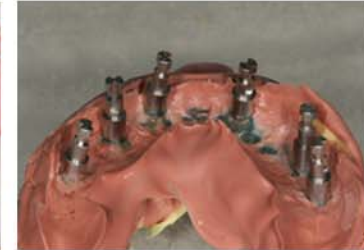

Pour model and drill holes in denture



Attach temp cylinders and lute to denture



Remove flanges and palate



Hard reline tissue side and polish



Attach analogs and make verification index



Haupt Dental Lab provides in-office services to assist with immediate load implant dentures. Please call in advance to schedule this service.

For more information about the materials involved in the process outlined above, please contact Haupt Dental Laboratory.